



Ready to tile over Shower Base Installation Instructions

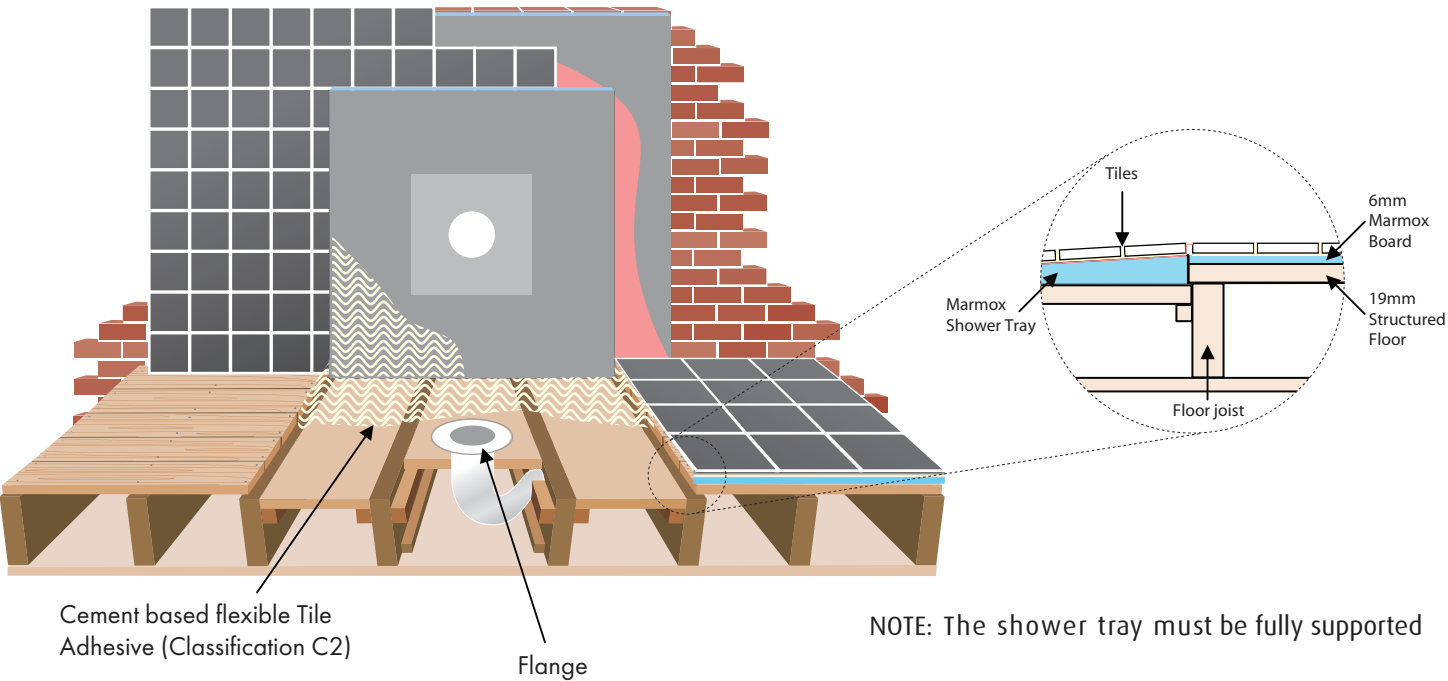


Level Entry Tray example (recessed) without hobs




Surface mounted tray example with hobs

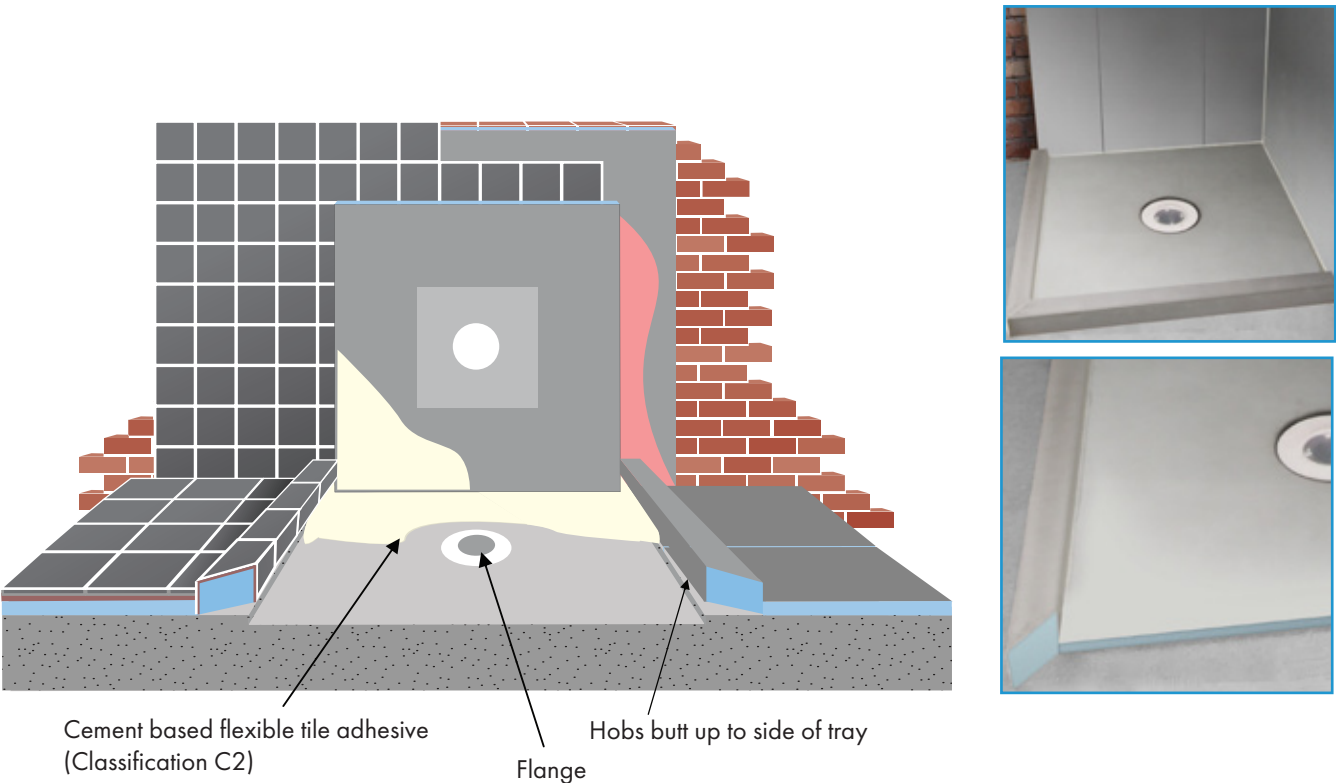


Shower tray installation

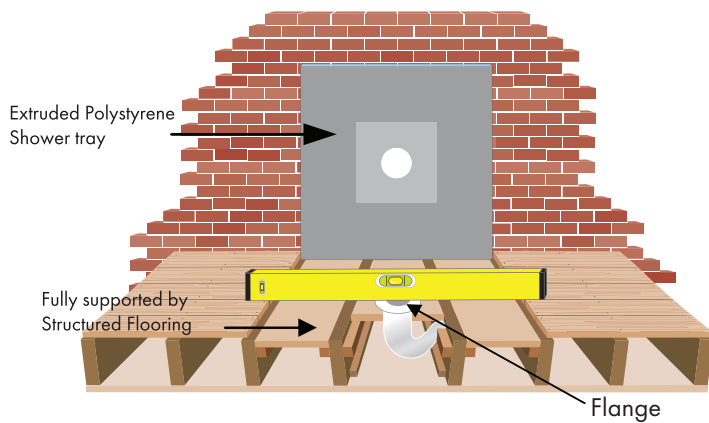


- 1 Check that the floor is flat and level. Clean the floor area for the shower base.
- 2 Dry position the shower base and mark the location of the drain, and the outside edge(s). Cut the floorboard for the pipe location and finish plumbing connections (including waste flange).

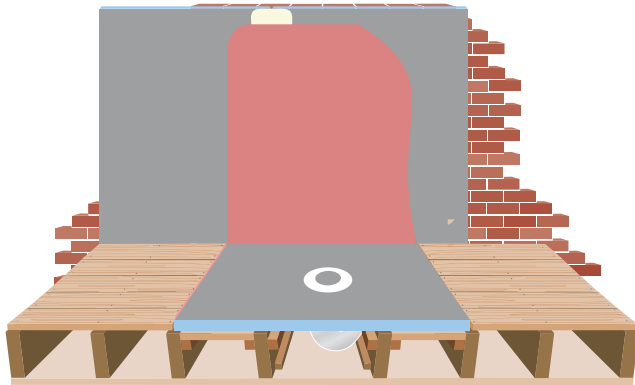

- 4 Apply any Branz approved water based waterproofing (non solvent based) to the entire surface of the shower base, flange and wall sheeting according to the manufacturer's recommendations.

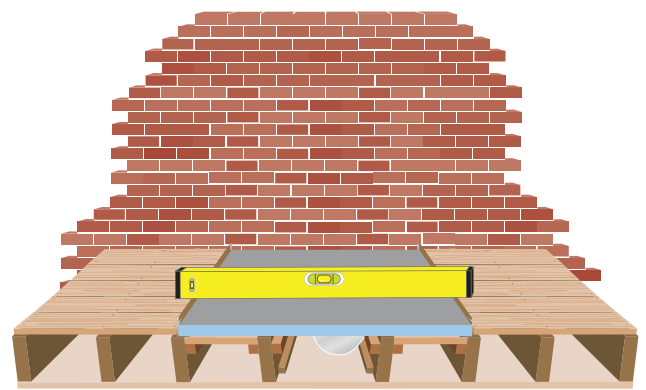


- 3 Use a flexible tile adhesive with 10mm notch trowel to fix the shower base to the floor. Place the shower base in position, apply downward pressure on the shower base and check for level.

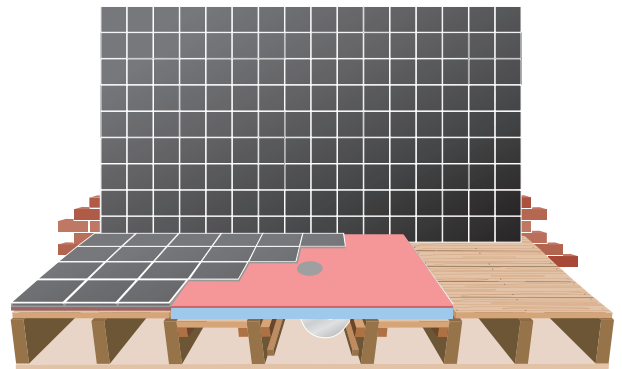


- 5 After the waterproofing dries, the shower can be tiled in a regular manner.


Centre drain

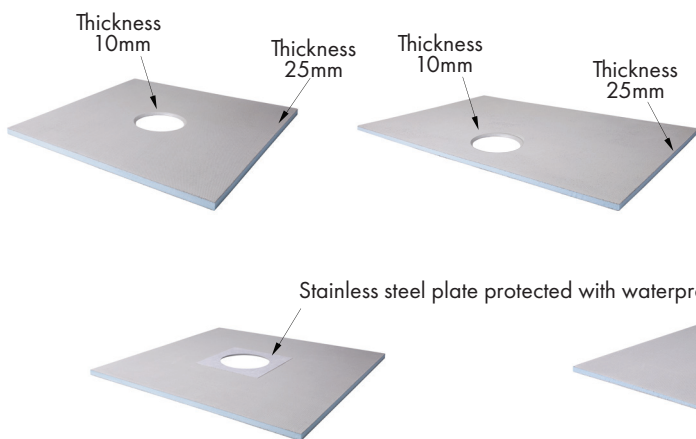


Offset drain

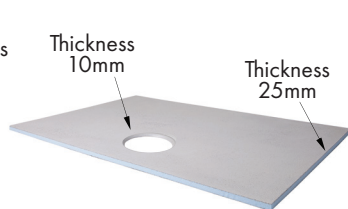

Trough drain traverse

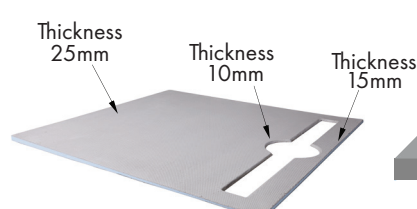

Shower hobs

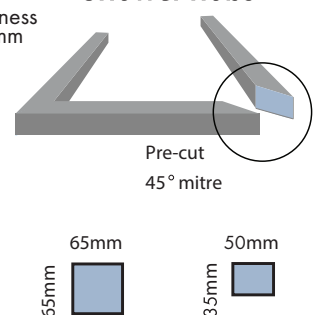

For more information and detailed drawings please go to the downloads section of the Marmox website

Marmox New Zealand Ltd

T 0800 627 669 F 09 820 7090 E info@marmox.co.nz W www.marmox.co.nz